



> start

X

For future protocol updates, also check www.amaxa.com/ celldatabase

Nucleofector® 96-well Shuttle® Software Recovery CD

Chapter 1	1.	Introduction	2
Chapter 2	2.	General specifications and instructions	2-3
	2.1	Soft-/Hardware specifications	2
	2.2	Handling instructions	3
Chapter 3	3.	Operating instructions	4-20
	3.1	Short instructions	4
	3.2	Start & Log-In	5
	3.3	Compatibility check and automatic software update	6
	3.4	Main menu	8
	3.4.1	Menu "File"	8
	3.4.2	Menu "Profiles"	10
	3.4.3	Menu "Cell type code"	11
	3.4.4	Menu "Connection" and Menu "Version"	12
	3.5	Working with Parameter files	13
	3.5.1	Opening an existing Parameter file	13
	3.5.2	Use of Template parameter files	13
	3.5.3	Creating a new Parameter file	13
	3.6	Well selection & assignment of well parameters	14
	3.6.1	Well selection	14
	3.6.2	Well parameters	14
	3.6.3	Applying of well parameters	15
	3.6.4	Removal of assigned well parameters	16
	3.6.5	Change of parameters for a group of wells	16
	3.7	Report of Parameter file	17
	3.8	Starting a 96-well nucleofection®	17
	3.9	Working with Result files (*.ur)	18
	3.9.1	Interruption of the 96-well nucleofection process	18
	3.9.2	Completion of the 96-well nucleofection experiment	19
	3.9.3	Repetition of the experiment	19
	3.10	Report and export of a Result file	20
Chapter 4	4.	Troubleshooting	21-24
	4.1	Troubleshooting	21
	4.2	Error codes	22
	4.2.1	Program execution errors	22
Chapter 5	5.	Appendix	25-27
	5.1	Color code of boxes (drop-downs, text boxes)	25
	5.2	Color codes of wells	25
	5.3	List of Shortcuts	26
	5.4	Copy-paste functionality	26

1.

2.

Introduction

The Nucleofector[®] 96-well Shuttle[®] Software represents the graphic user interface required for running the Nucleofector 96-well Shuttle System. It is used to setup, control and save the results of a 96-well nucleofection[®] experiment.

General specifications and instructions

Soft-/Hardware specifications

The Nucleofector 96-well Shuttle Software is pre-installed on a Dell™ Laptop provided by amaxa (for specifications refer to the Laptop manual).

In case a replacement of the laptop is necessary the following hardware and system specifications are required:

Processor/CPU:	minimum 1.7 GHz,
	e.g. Pentium 3 or higher
Memory:	minimum 1024 MB RAM
Data storage:	minimum 10 GB hard disk
Monitor:	15 inch XGA
System:	Windows [®] XP or 2000
Hardware:	USB connection
	CD/DVD writer

Recovery CD: Use of this CD will reset the system to its initial status as provided by amaxa. Please contact amaxa's Scientific Support Teams for a guideline how to use this Recovery CD.

Software Updates: amaxa reserves its rights to change the described software without announcement or to generate updates of the software. Software Updates will be provided on a CD or as download from our website (ww.amaxa.com). Please register at www.amaxa.com/softwareupdate to receive announcements for Software updates.

2.1

License statement

amaxa AG is holder of various patents, patent applications, copyrights and technical and scientific experience with respect to the Nucleofector[®] technology. Use of amaxa's Nucleofector[®] technology and/or related software requires a license from amaxa AG.

Purchasers are granted a non-exclusive, non-transferable license for a limited use of amaxa's Nucleofector[®] technology and related software for research and development purposes, the terms of which are disclosed in detail in the license agreements accompanying the shipped Nucleofector[®] Device or 96-well Shuttle[®] device. Commercial application is allowed under amaxa's license for for-profit-entities.

Both licenses exclude in particular any right to manufacture, copy, reproduce, transmit, distribute, sell, lease, transfer or sublicense amaxa's Nucleofector[®] technology and/or related software to any third party. For license information contact amaxa AG by phone +49 (0)221-99199-0 or e-mail licenses@amaxa.com.

2.2 Handling instructions

- > Only use the software once you have read and understood the Nucleofector 96-well Shuttle Software manual. The manual should be accessible for all users. Make sure that each potential user reads and understands it.
- > Do NOT alter the software in any manner.
- > Only use the software in connection with the Nucleofector 96-well Shuttle System.
- Installation of additional software on the laptop: All the software necessary for system operation has been pre-installed. It is not recommended to install additional software including virus scanners or network tools on the system unless it is absolutely necessary. Even then, be sure it can be uninstalled should it become necessary. Additional software installation is not under the control of amaxa and may void your system warranty. Additional software may cause conflicts with existing software and system operation while it is running or may implement configuration changes during installation that could cause erratic system performance or failure. If additional software is installed on the system, it is done so at the customer's own risk.
- Installation of amaxa software on another computer: Installation of the software on another computer than the one provided by amaxa occurs at the users own risk. Installation of software may cause damage to your computer or loss of data stored on the computer. User assumes the entire risk of using the software and for any computer and/or data damage arising out of or in connection with the use of the software.

amaxa disclaims all warranties and shall in no event be liable for any kind of damages caused by or arising out of any operation or use in violation with the above safety and handling instructions.

3. Operating instructions

3.1 Short instructions

Step	Description	For details see
1	Connect Nucleofector II Device, 96-well Shuttle and Laptop.	→ 96-well Shuttle manual
2	Switch on all 3 components.	
3	Start the 96-well Shuttle Software on the laptop and login.	\rightarrow chapter 3.2
4	Check your user settings (optional).	\rightarrow chapter 3.4.2
5	Check USB connection between laptop and Nucleofector II Device or re-connect.	→ chapter 3.4.4
6	Define your experiment by opening an existing Parameter file or creating a new one.	→ chapter 3.5
7	Prepare samples and transfer them in the 96-well Nucleocuvette plate.	→ Optimized Protocol
8	Insert the 96-well Nucleocuvette plate into 96-well Shuttle.	→ 96-well Shuttle manual
9	Upload programs and start nucleofection process from a) the laptop or b) the 96-well Shuttle.	→ chapter 3.8 → 96-well Shuttle manual
10	Monitor nucleofection process during program execution a) either via the Nucleofector 96-well Shuttle Software b) or the display of the 96-well Shuttle.	→ chapter 3.9 → 96-well Shuttle manual

Step	Description	For details see
11	After run completion, remove 96-well Nucleocuvette plate from the 96-well Shuttle and transfer samples to culture plates.	
12	View results on the laptop to check if errors occurred.	\rightarrow chapter 3.9
13	Close files and exit 96-well Shuttle Software and switch off all components.	→ chapter 3.4.1

3.2 Start & Log-In

Switch on the laptop (ignore safety message and wireless message) and start the Nucleofector 96-well Shuttle Software via the desktop link or via "96wellShuttleSW.exe" under C:\amaxa\96-well Shuttle Software. Upon starting the software a login window appears asking for user name and password.

Your user name and password for the first login is:

User name: Administrator Password: amaxa

Once you are logged in you can change your Administrator login or create additional users using the "My Profile" command (located in the "Profiles" menu, see 3.4.2).

There are two different login levels:

- a) Administrator: The administrator can create new users (see 3.4.2), unlock accounts after entry of a wrong password (see below) and is allowed to import program updates (see 3.4.3).
- b) User: normal user

Enter your user name and password.

> Note:

1) The login is case-sensitive.

2) The account will be locked if a wrong password is entered three times. Please contact the Administrator to unlock your account. In case the Administrator forgot his/her password please contact amaxas Scientific Support.

As soon as the Nucleofector 96-well Shuttle Software has been started and the USB connection is active (see 3.4.4), the Nucleofector II device switches into "96-well mode" (as indicated in its display) and the buttons of the Nucleofector II Device are disabled.

3.3 Compatibility check and automatic software update

Upon starting, the software automatically checks the compatibility of the software versions of all connected Nucleofector 96-well Shuttle System components, i.e. the Nucleofector II device and the 96-well Shuttle. This process only works if the system components are properly connected and switched on.

If an update of the Nucleofector 96-well Shuttle Software version was installed which is not compatible with the software of the connected devices (Nucleofector II or 96-well Shuttle) you will be guided through an update process by message windows (see flow chart below). You can either allow the update by pressing the YES button or refuse or cancel the process by pressing the NO or CANCEL button.



This chapter gives an overview of the menu for the Nucleofector 96-well Shuttle Software. A more detailed description regarding how to use software files can be found in the subsequent chapters (see 3.5 - 3.10).

Menu "File"

Menu "File" → Open

Via this menu point, three file types can be opened:

- a) Template parameter files (*.tp): A Template parameter file is a Parameter file pre-defined by amaxa, e.g. "Cell Line 96-well Optimization Strategy". Template Parameter files are stored in the folder "Nucleofector 96-well Shuttle Software/amaxa Template Files". Such a file cannot be edited by a user and it is not suitable to directly start an experiment. For usage and editing it has to be converted into a Parameter file saved under a new user-specific name (see 3.5.2).
- Product Called Call
 Called C
- b) Parameter files (*.up): These files can be individually created and saved by the user for his specific experimental setups.



c) Result files (*.ur): A Result file is generated out of a Parameter file as soon as the user starts a 96-well nucleofection experiment. The Result file inherits all information of the Parameter file and additionally logs the results of the nucleofection process.

Parlies Delige code Correction	Venine							
2 . .								
e amonto a								
emplate Parameter No								
Comparents and Setting/U Software/Papender/Cal, and software/Papender/Cal, and software/Papender/Cal, and software/Papender/Cal, answer/Papender/Cal, and software/Cal, answer/Papender/Cal, answer/Papender/Cal, and software/Cal, and Setting/Cal, and Setting/Cal, and software/Cal, and Setting/Cal, and Setting/Cal, and Setting/Cal, and Setting/Cal, and Seting/Cal, and and Setting/Cal, and Setting/Cal, and and and Setting/	phase ("Dentigr/Hallenbeck X wel Shaffe See, splinismon ly D	De	da Paran	-		110	611.17	 I
Vell parameters delma (pres velocita) Celliger scale Scales (celli sis) Celliger internation	jani Constituine Colonant	1 2			7			
Salme	Saluter aniar							

3.4.1

3.4

Menu "File" → New

This menu point is used to create a new Parameter file (see 3.5). New Template parameter files can be only created by amaxa.

Menu "File" → Save Menu "File" → Save as Shortcut <Ctrl> + S

Changes to an existing Parameter file can be saved under the same name by choosing "Save" or under a new name by choosing "Save as".

Menu "File" → Report

This menu point opens a tabulated report of a Parameter or Result file, which can be further exported to the Microsoft[®] Excel[®] compatible csv-format.

Menu "File" → Close file

Via this menu point any file can be closed. Alternatively, files can be closed via the X-button in the upper right edge of the file window.

Menu "File" → Logout

Via this menu point, a user can logout either to lock the software without closing it or to enable another user to log-in (see 3.2). Upon logout, the USB connection to the Nucleofector II Device is inactivated. If the same or another user logs in again, the connection has to be re-activated (see 3.4.4).

Menu "File" → Quit

This menu point quits the Nucleofector 96-well Shuttle Software. Alternatively, the software can be closed via the X-button in the upper right edge of the software window. Menu "Profiles":

Menu "Profiles" → My profile → Password

Via this menu point, the user-specific password can be changed.

Menu "Profiles" → My profile → Settings

Via this menu point, a user can define his personal system settings

Path to save user Parameter files:	Default setting is C:\amaxa\Parameter files
Path to save user Result files:	Default setting is C:\amaxa\Result files
Autosaving of files:	The user can either define the required autosave intervals from 1 to 30 min or inactivate autosaving by deleting the mark. The default setting is active autosaving every 30 min.
Automatic or manual opening of the 96-well Shuttle retainer:	By marking the box on or off, the user has the option to define if the retainer of the 96-well Shuttle shall open auto- matically at the end of 96-well nucleofection experiment or not.
Sound settings:	 There are three types of events which can be announced to the user by a specific sound: Completion of an experiment. Error: An error that interrupts the starting or the processing of a nucleofection experiment and requires an action of the user. Warning: An error which occurs on the well basis but does not interrupt the nucleofection process, hence, does not require any action of the user. The user can scale the loudness of each sound between 0% (= off) and 100%.
	Menu "Profiles" → My profile → Profile management

This menu point is only accessible for the administrator to create new users, delete a user or unlock a user in case the wrong password was used three times.

www.amaxa.com

Menu "Cell type code"

Menu "Cell type code" → Edit

The software offers the possibility to add custom cell-type codes to the cell-type code list for choosing a nucleofection program, e.g. after determination of a specific program code as optimal for a certain cell-type. Existing custom cell type codes can be only edited or deleted by the user who created them or by the Administrator. amaxa cell-type codes cannot be edited or deleted at all. To add, edit or delete a custom cell-type code all files must be closed.

Addition of a new cell-type code:

- > Press "Add new" to add a new cell-type code.
- > Enter name for new cell type code.
- > Choose the appropriate 96-well program code (part 1 and part 2).
- > Choose the respective 96-well solution code to define the solution which works optimal for the new cell type.
- Optional: Define if new cell-type code shall be available for other users by checking the box. In the cell-type code drop-down list of a Parameter file, custom cell-type codes will be highlighted in red (if available for all users) or blue (if just available for the user who added it).
- > Optional: Add a comment to this code.
- > Press "Apply".
- > By pressing "Cancel" all changes will be deleted.

Editing of an existing cell-type code:

This function is only valid for the users' own cell type codes, but not for amaxa codes or codes of another user. Only the administrator is allowed to edit all custom cell-type codes.

- Mark the respective cell-type code in the list and press "Change".
- > After the changes were done press "Apply".
- > By pressing "Cancel" all changes will be ignored.

Deletion of an existing cell-type code:

This function is only valid for the users own cell type codes, but not for amaxa codes or codes of another user. Only the administrator is allowed to delete all custom cell-type codes.

- > Mark cell-type code in the list and press "Delete".
- > Press "Apply" to confirm deletion.
- > By pressing "Cancel" the deletion will be ignored.



Cell type code list	New cell type code	Test		-	
	Program code: 96-	part 1 CC 💌	pat2 102 💌		
	Solution	Cell Line SE		•	
	Comment	high efficiency			
Add New	Available for all up	N15	Add ne	w cell type code?	Apply
Change					Cancel
Delice					
				0K.	Cancel

Cell type code list	New cell type code	
lest	Piogram code: 96-	
	Solution	
	Comment	
Add New	Avalable for all users	Apply
Change		Cancel
	1	

To close window and accept the changes press "OK". By pressing "cancel" or closing the window without confirmation by OK, all additions or changes will be ignored.

> Note:

If a new amaxa program list is imported (see below) custom cell-type codes won't be overwritten.

Menu "Cell type code" → Import

This menu point can be used by the Administrator to import a new 96-well Shuttle program list provided by amaxa (program definition files = *.pd). Importing of a new program list will overwrite the complete list of amaxa program and cell type codes, except for the custom codes (see above).

Menu "Cell type code" → Nucleofector

The program list of the Nucleofector II which is used for its standalone functionality is not related to the 96-well program list stored in the software. However, as an alternative to a chipcard update (see Nucleofector II manual) this menu point offers the Administrator the possibility to upload a new program list provided by amaxa onto the Nucleofector II Device (nucleofector program definition files = *.npd).

Menu "Connection" and Menu "Version"

Menu "Connection" → Reconnect

The status of USB connection is indicated in the lower bar of the software window ("Connected" or "Not connected"). In case USB connection was not built up while starting the software or in case it is lost or after a re-login press "Reconnect". The connecting process takes a few seconds. In case reconnection fails, try again or re-start your laptop.

Menu "Version" → Details

This menu point provides information about the system components: the serial numbers of connected devices (Nucleofector II and 96-well Shuttle), the software version numbers and the version of the 96-well program list.

3.4.4

Attribute	Value
PC Software version	1.0Ь
Nucleofector Serial Nu	10600009
Nucleofector Software	5.3
Shuttle Serial Number	306S0010
Shuttle Software version	1.3
m-version	1.0
c-version	5.3
p-version	5.5
d-version	5.5
PC application version	1.0, 1.0
PC dll version	1.0
Program definition version	S-EA-2.2

Working with Parameter files

A Parameter file defines a 96-well nucleofection experiment. i.e. which 96-well program shall be applied to which well. For convenient assignment of parameters to a well the 96-well Nucleocuvette[™] plate is represented graphically and each well can be selected individually (see 3.6).

Opening an existing Parameter file

Menu "File" → Open → Parameter file

An existing Parameter file can be directly used to start an experiment or it can be edited as described under 3.6. Up to three Parameter files can be opened in parallel.

Use of Template parameter files

Menu "File" → Open → Template parameter file

A predefined amaxa Template parameter file cannot be used directly. It has to be converted to Parameter file by pressing "Create parameter file". The software will ask you to save the file under a new name and the new Parameter file opens inheriting the assigned well parameters from the Template parameter file. This new Parameter file can be directly used to start an experiment or it can be edited as described under 3.6.

Creating a new Parameter file

Menu "File" → New → Parameter file

The user can generate a new Parameter file either by changing an existing one or creating it by opening a new Parameter file. The system will ask the user to save it under a new file name. It can be edited as described under 3.6.

3.5.1

3.5.2

3.5.3

www.amaxa.com

Well selection & assignment of well parameters

Well selection

Total: Carlos of Carlos of Verse Verse of Carlos of Verse Verse of	adentector 95 well Shuttle Setteore									- 1
	Puties Entlypeicode Connection Vesion									
And the NULL of Control of Control Con										
Presenter file	UDier TVU107 up									
The Description of Derry description (Decay Decay Deca	terreneter Be									
Existence and Subject tent of Subject tent										
halm alen ander ale Status (Status (St	 C. Oocaretti and Satego Victure Satego Via analattiko (Joer Victure) 	Derkip/Autoretry Novel	Linute .							
a sender 33.02023 53.02 a maximum and a sender and a send	der aber									
Well presenter: ment: belie insise(Offspee ments: Side of the off of Side of the offspee Side of the offspee Side of the offspee Side	at multied 25.04.2005 15.18.45, adven									
With proceeders								11110	1110	-
Americ Multich sinset Offigene rank in State and an and a speed State in the speed in the spee	fell parameters			ð					•	•
College main (mill pint) mage main (mill pint) Salam (diar U) College main (diar U) College ma	acted (subjection)				•••				1	
Cellan cala (addrefalta) agenerado 36 (Procession) Salaces Cellan cala (addrefalta) Cellan cala (addrefalta) Cellan cala (addrefalta) Salaces Cellan cala (addrefalta) Sal				E	•••	•••				
agen etc. X. For a set and a set a s	Cathanania (USSTANTIC)	-		8	••					•
Saladar Saladar <t< td=""><td>part part</td><td>2</td><td>Caninal Option</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>	part part	2	Caninal Option							
Editors 10 Col transf Col transf Col transf Salarian Salarian proved	agram code 36. (77 💌 100			1	••	•••				•
Labori (al di al	the literation of			1	••	•••				
Offgestimular Offestimular	states Contractor			5			101	101		
Lakan Lakat avet	Call type information.	Cell answer		1	1.2	1 4 6.5	1.8-12	0.00	10 1	12 0
Salatan Salata anard Usinal A								Acch		Underne
Lände Sande mort										
Salada Salada asset		_	_							
Listed and	Line	Taking and							0	read ore
									1000	of solution
									Libe	at and a
			_							

Each well can be selected or activated individually via a left mouse click. Holding the left mouse button and dragging selects multiple wells. Selected wells are indicated by a box. Upon selection of a well the parameter boxes are activated (as indicated by a white color; for color codes of drop-down and text boxes refer to Appendix 5.1).

3.6.2

Well parameters

Each well can be defined via the following parameters:

 96-well Nucleofector Program: This is a mandatory well parameter which can be chosen via two options (drop-downs) By "cell-type code": Each cell-type code is assigned to the optimal program for the certain cell type as defined in the amaxa Optimized Protocol (e.g. "T cells, human, unstim." is affiliated to the optimal 96-well nucleofection program for unstimulated human T cells). The "cell-type code" list can be extended by the user with customized cell-type codes (e.g. after a cell line optimization) (see 3.4.3).

By "program code" (e.g. 96-CA-116): Part 1 (letters) and part 2 (numbers) can be selected separately. In this case the "cell-type code" box stays empty. Furthermore if the program code is changed after a program was selected via "cell type code" the cell type code entry disappears.

2. Control options (drop-down):

"standard": This is the default setting, reflecting a normal sample.

"no program control": This option offers the possibility to add the information "no program control" to a certain well in order to track control wells. A "no program control" is indicated by a dark blue dot in a light blue well (see Appendix 5.2). In the current software version the

3.6.1

default program code (96-CA-100) or the program code selected before is still shown in the respective drop-down and in the reports. Nevertheless, no program will be applied to this well.

"no DNA control": This option offers the possibility to add the information "no DNA control" to a certain well indicated by a light blue backslash in the dark blue well (see Appendix 5.2). In this case, the selected program will be applied. This option helps to track those wells as controls without substrate.

- 3. **96-well Nucleofector Solution (optional):** This drop-down list is connected to the "Cell-type code" drop-down: e.g. if cell-type code "T cells, human" is chosen, solution dropdown automatically shows "TC, human" indicating the optimal 96-well Nucleofector Solution for human T cells. However, it is a one-directional connection: By changing the solution the "Cell-type code" disappears because one solution might be connected to different cell types.
- 4. **Further parameters (optional):** can be entered as free text to further describe the experimental parameters
 - Cell type information: Offers the possibility to add any kind of required additional information to the cell type (e.g. passage no.)
 - > Cell amount
 - > Substrate
 - > Substrate amount

Applying of well parameters

For defining the parameters for one or more wells, select/ activate them by using the left mouse button. A selected well is represented by a surrounding box.

After parameters (see 3.6.2) are defined for one or more wells, press the APPLY button to confirm the definition. Upon pressing APPLY, the well color will change from light to dark blue.

Copying of assigned well parameters to another well

The software allows for copying parameters from one well to another. If selecting different numbers and/or arrangements of wells for copying and pasting please refer to Appendix 5.4 for details how such cases are addressed by the software.

3.6.3

- Activate/select the well(s) to be copied using the left mouse button.
- Click the right mouse button to open the "well editing menu" (copy, paste, undefine) and choose "copy" via left mouse click.
- 3. Activate/select the well(s) into which you wish to paste the copied parameters using the left mouse button.
- Click the right mouse button to open the "well editing menu" (copy, paste, undefine) and choose "paste" via left mouse click.

As long as no new well parameters are copied, the copy memory is not deleted, i.e. well parameters can be pasted multiple times into different wells.

Note: As an alternative to the menu-based copy and paste commands, you can use the shortcuts <Ctrl>+C (copy) and <Ctrl>+P (paste). However, in this case you have to reset the copy memory by pressing ESC before the software accepts a new copy command.

3.6.4	Removal of assigned well parameters:
	To remove the definition of a well, select respective well(s) and press the UNDEFINE button.
3.6.5	Change of parameters for a group of wells
	 The software allows for parameters from a group of selected wells to be changed at the same time: Select the desired wells: if parameters differ between members of the group this will be indicated by either an empty grey box (in the case of drop-down boxes) or a grey box with red text stating "values differ" (in the case of free text boxes). Change parameter(s) of interest. These values will be changed for all selected wells. Confirm changes by pressing APPLY (all previous definitions of each well will be kept except the newly entered parameter(s)).

Note: In the case that you wish to ensure that all parameters for a selected group of wells are identical, it is often useful to first press UNDEFINE (which resets all parameters) and then to re-define each parameter.

Report of Parameter file

		0.0	locument	and Se	ting:\Alphatest	Desktop/Muci	inclector 56-we	I Shatle Solwa	el/aneteti	erNJam TNJ907.	e:
ho:		Cade	632								
1000	let.	-30	4,20061	10.43.6	dees :						
-	-	-	-	-	-		_	_		_	_
	low	Colu	Propia	Pingla	Cell-type cod	Solution	Cell Type	CelAmourt	Sidunate	Subshate Art	Control option
1		1	EP	100	US37 (ATCC)	Cell Line SF					No Program
I	F	1	EP	100	U937 (ATCC)	Cell Line SF					Standard
		1	EP	100	US37 (ATCC)	Cell Line SF					Standard
1	14	1	EP	100	U937 (ATCC)	Cell Live SF					Standard
E		1	ER	100	U937 (ATCC)	Cell Line SF					Standard
F		1	EP	100	U937 (ATCC)	Celline SF					Standard
6		1	EP	100	U937 (ATCC)	Cell Line SF					Standard
E F		1	EP	100	U937 (ATCC)	Cell Line SF					Standard
1	1	2	EP	100	U937 (ATCC)	Cell Line SF					Standard
E	10	2	EP	100	U937 (ATCC)	Cell Line SF					Standard
		2	EP	100	U937 (ATCC)	Cell Line SF					Standard
C	1	2	EP	100	URST IATCCI	Cell Line SF					Standard
1		2	EP	100	US37 (ATCC)	Celline SF					Standard
1		2	EP .	100	US37 (ATCC)	Celline SF					Standard
0		2	EP ·	100	LIST DATCCI	Cell Line SF					Standard
	0.00	2	EP.	100	USI7 IATCCI	Celline SF					No Program
1		3	EP	100	US37 (ATCC)	Celline SF					Standard
1		3	EP .	100	URI7 JATCCI	Celline SF					Standard
		3	EP.	100	URI7 MATCO	Celline SF					Standard
C		3	DP.	100	USI7 JATCCI	Celline SF					Standard
1		3	EP.	100	U937 JATCCI	Cellare SF					Standard
		3	EP.	100	US37 JATCCI	Cellare SF					Standard
		1000	10		Contract of the local division of the local	0.01.00					

File → Report

For overview purposes, in addition to the graphical representation of the 96 wells, a table with assigned Well parameters is available as printable report in a new window. The table can be sorted individually by clicking on the header of a column. The report can be printed and also exported as an Excel-compatible csv-file.

Starting a 96-well nucleofection® experiment

A 96-well nucleofection experiment is started from the active Parameter file (up to 3 Parameter files can be open in parallel, the active one is the one visible on the screen). For starting an experiment there are two options:

Start directly via software

- Press "Upload and Start" to start the experiment directly (prerequisite: 96-well Nucleocuvette plate is already inserted in the retainer of the 96-well Shuttle).
- > The software will ask you to enter a name for the Result file.
- > The Parameter file is sent to the Nucleofector II Device. The progress of this transfer is shown by a running bar.
- > The retainer of the 96-well Shuttle closes automatically.
- After a short lag phase, the nucleofection process starts,
 i.e. the defined programs are applied well-by-well.

Start from 96-well Shuttle

- > Press "Upload" to upload the experiment.
- A Result file will be automatically generated and stored under the name of the logged user plus time stamp.
- > The Parameter file is sent to the Nucleofector II Device. The progress of this transfer is shown by a running bar.
- Successful upload will be indicated in the software by "The experiment was successfully uploaded to the device".
- > Insert the loaded 96-well Nucleocuvette plate into the retainer of the 96-well Shuttle.
- > Press the CLOSE button and then the START button on the 96-well Shuttle.
- After a short lag phase, the nucleofection process starts,
 i.e. the defined programs are applied well-by-well.

3.8

page 17 ww

www.amaxa.com

Working with Result files (*.ur)



The Result file opens automatically once "Upload" or "Upload and start" has been pressed and a Result file name has been entered (see 3.8). During the nucleofection process, the progress of the experiment is monitored and shown graphically (green = OK, red = error occurred). After completion of the nucleofection process and final download of the results, the result of each well is saved automatically in the Result file (Each partial or completed run will be saved automatically). Result files can't be closed before the download is completed. In case of an error, the respective error code can be viewed by clickin on the respective well or printing the report (see 3.10). For extended error information (error code plus error explanation including handling recommendations) please refer to chapter 4.

Note: In case of a software crash or loss of the USB connection during execution only the monitoring process is interrupted while the execution is not affected. Upon re-start of the software or re-connection monitoring continues and results will be downloaded as usual.

3.9.1

page 18

Interruption of the 96-well nucleofection process

The experiment can be interrupted from the Result file or via the 96-well Shuttle menu (please refer to 96-well Shuttle Manual) at any time by pressing the PAUSE button. The retainer will open automatically (if "retainer opens automatically at end" is selected in the user settings, see 3.4.2).

Options during the paused status:

- a) Abortion of the experiment: The experiment can be completely aborted by pressing the STOP button. The results of the wells processed so far will be downloaded into the Result file. The download is indicated by a progress bar and finished with the message "Download completed".
- b) Resumption of the experiment: The experiment can be resumed by pressing the RESUME button. The 96-well Shuttle continues with the next well in line and the process can be monitored on the screen of the Nucleofector 96-well Shuttle Software.

3.9

Completion of the 96-well nucleofection experiment

At the end of a nucleofection experiment, the retainer opens automatically (if "retainer opens automatically at end" is selected in the user settings, see 3.4.2). The results will be downloaded into the Result file. The download is indicated by a progress bar and finished with the message "Download completed".

Repetition of the experiment

As long as no new Parameter file is uploaded to the 96-well Shuttle and the components of the Nucleofector 96-well Shuttle System have not been switched off, the system offers the possibility to repeat the same experiment with a new plate by just pressing the START button at the 96-well Shuttle again. The Nucleofector 96-well Shuttle Software will automatically create a new Result file which is stored under the name of the logged user plus an actual time stamp. Please make sure that all required components are still active.

When an experiment is completed, the Nucleofector II device stays in 96-well nucleofection mode. To reset the status of the Nucleofector II device to stand-alone functionality the device has to be re-started.

3.9.2

Report and export of a Result file

Shee		e mep												
Re .														
he.		0.0	contents	and Set	ing:WphaterN	Denktop/Muci	ecfector 9	Event Sho	rtie Sol	wardlenit F	kesWater 1	U/907.ur		
uttor		adri												
	ners .	Ee	smart h	day										
	-11	1			_		-	-	-		-			i
	flow	Colu	Progra	Proga	Cel-type cod	Solution	Cell Typ	Call Amo	Subst	Substrate Am	Caribol a	Era	Tase	i.
	E	10	EP.	100	US37 (ATCC)	Cell Line SF					Standard	OK.	133	
	F	10	(P	100	USI7 (ATCC)	Celline SF					Standard	OK.	135	
	0	10	EP	100	U937 (ATCC)	Cell Line SF					Standard	CK.	136	
	H	10	(P	100	U937 (ATCC)	Celline SF					Standard	OK.	138	
	8	11	EP .	100	U937 (ATCC)	Celline SF					Standard	CK.	140	
	C.	11	EP .	100	U937 (ATCC)	Celline SF					Standard	CK.	141	
	D	11	EP	100	U937 (ATCC)	Cell Line SF					Standard	CK.	143	
	E	11	(P	100	U937 IATCCI	Cettre SF					Standard	DK.	145	
		11	(P	100	U937 (ATCC)	Celline SF					Standard	DK.	346	
	0	11	EP .	100	US37 (ATCC)	Celline SF					Standard	DK.	148	
	11	11	EP .	100	UB37 (ATCC)	Celline SF					Standard	CK.	150	
	A	12	EP .	100	UR37 MATCEL	Celline SF					Standard	Ex 6 - Art discharge c	162	
	8	12	EP .	100	U907 (ATCC)	Celline SF					Standard	CK.	164	
	C	12	(P	100	U937 JATCCI	Celline SF					Standard	CK.	100	
	D	12	EP.	100	UR07 BATCES	Celline SF					Standard	CK.	167	
	1	12	LP.	100	US37 (ATCC)	Celline SF					Standard	OK.	163	
	F	12	EP	100	USIT MATCE	Celline SF					Standard	OK.	171	
.1	6	12	FP .	100	11937 (4111)	Celline SF					Stevent	/w	177	

Paraffie	 B Down	Page
	···O. Result File	
Image: Section 100 (Section 100 (Sectio	The T-Developed and being diploced Decoupling back to the set the back advances of the United	
	Autor when Council 2010 2010 10 (1011)	
	E Manual II	
	Bacteria India India India 1000000	
	RectorRestorRestorRestored (1)	
	Budio Iunia Nuniar 100000	
	Whether is the same content ()	
	Accession 1-0	
	pression 6.2	
Tarset 1 Second Second <t< td=""><td>pressure 1.2</td><td></td></t<>	pressure 1.2	
	domine 13	
	PC application-restore 1.0, 1.0	
	AT develope 1.6	
	Program definitional second distance of the	
	And Jon Lots Artis Justice - Books - Lot Jon - Lot Journal Approx. (1970)	
	the first past which it is a second s	
	a la pa pa para para pa	
	to be the balleties	
	a to be the tage taging the	
4400	a to be the last between	

File → Report

- > The results can be also viewed as a printable and exportable report. The report contains the following information:
 - a) time needed for the complete nucleofection process
 - b) assigned Well parameters
 - c) result for each well: OK or errors with extended error information
 - d) time stamp and UserID (for regulated environments)
- > The report can be printed and also exported as an Excelcompatible csv-file.

4. Troubleshooting

4.1 Troubleshooting

The following troubleshooting guide may be helpful if the Nucleofector® 96-well Shuttle® Software does not work as expected. Should you have any questions regarding the use of the software, please do not hesitate to contact amaxa's Scientific Support Teams:

Europe/World	USA
phone +49 (0)221-99199-400	phor
fax +49 (0)221-99199-499	fax 2
scientific-support@amaxa.com	scier
www.amaxa.com/supportandinfo	www

phone 240-632-9110 fax 240-632-9112 scientific-support.US@amaxa.com www.amaxa.com/supportandinfo

Problem	Procedure
Your log-in request was ignored due to wrong user name and/or password	Try it again and check for case-sensitivity. The account will be locked if a wrong password word is entered three times. Please contact the Administrator to unlock your account. In case the Administrator forgot his/her password please contact amaxa's Scientific Support.
The Nucleofector II Device does not switch to 96-well mode after the software was started	Check USB status. If inactive ("not connected") perform a re-connect.
"Not connected" is indicated in the lower bar of the software window.	Check physical USB connection and perform a re-connect. If this does not solve the problem, re-start the software or re-start the whole system.
The csv-file opened in Excel does not result in column-separated data.	Mark the whole column containing the data, go to the menu point "data" and choose "text in columns" to open the conversion wizard. In the first dialog choose the upper option "separated" and press continue. In the second dialog choose " semicolon" as separation marker and press finish.

In case of troubles with any hardware part of your laptop, please contact Dell™ worldwide service teams. A list of international contact addresses is provided with the laptop.

If you have questions to a Microsoft[®] program (Windows[®] or Office[®]), please contact Microsoft[®] Technical Service.

Error codes

There are three different sources for the generation of errors:

- 1. Program execution errors (see below)
- 2. Software or Communication errors: Such errors will be communicated by the software via a message window.
- 3. Mechanical errors of the 96-well Shuttle (For details, please refer to 96-well Shuttle manual)

4.2.1 Program execution errors

Each program execution error will be logged by its error code (e.g. Err1A) in the Result file of a 96-well nucleofection experiment. In parallel the display of the 96-well Shuttle will count up the number of errors ($\Sigma E = n+1$). Some errors (Err1A, Err1B, Err2, Err3 and Err7) - if they

occur on more than 16 successive wells - will lead to an interruption of the process. All well results generated before interruption will be downloaded. In that case, the display of the 96-well Shuttle will show its "Stopped" screen.

Error Code	Possible error	What happened?	What to do?
(logged in Result file)			
Err1A -	Internal Nucleofector II error	No pulse generated	If you want to retry the failed wells, generate
Internal communi-	or device possibly defective		a new Parameter file containing parameters
cation failure			for the previously failed wells only.
			If the experiment was interrupted due to
			continuous Err1A, switch off the Nucleo-
			fector, wait for 2 seconds, switch on again
			and re-start program execution.
Err1B -	Internal Nucleofector II error	Pulse generated with	If you want to retry the failed wells with new
Internal communi-	or device possibly defective	unclear outcome	samples, generate a new Parameter file
cation failure			containing parameters for the previously
			failed wells only.
			If the experiment was interrupted due to
			continuous Err1B, switch off the Nucleofector,
			wait for 2 seconds, switch on again and
			re-start program execution with new samples.

Error Code	Possible error	What happened?	What to do?		
(logged in Result file)					
Err2 -					
Inappropriate or no solution, contacting error, HV cables disconnected	Inappropriate or no solution or inappropriate well volume or inefficient contacting of well(s) or high voltage cables not connected	No pulse generated	If you want to retry the failed wells, verify the volume in the corresponding well, check type of solution, check connection of high voltage cables and generate a new Parameter File containing parameters for the previously failed wells only. If the experiment was interrupted due to continuous Err2, check connection of high voltage cables or switch off the Nucleofector, wait for 2 seconds, switch on again and re-start program execution.		
Err3 -	Nucleofector II overheated or possibly	Very weak pulse generated	Switch off the Nucleofector II, wait for		
Device possibly defective	defective or inefficient contacting of well(s)		1 minute, switch it on again and re-start program execution with new samples.		
Err5 -	Inappropriate solution or inappropriate	Device possibly generated an arc	Utilize samples if maximum efficiency is not		
Arc discharge	well volume, occasional arcing	discharge. Program could be	essential. If you want to retry failed wells with		
correction 1		resumed and successfully completed. A limited impairment on efficiency and vitality has to be presumed.	new samples, check whether combination of 96-well program and Solution fits the protocol recommendations and check sample volume.		
Err6 -	Inappropriate solution or inappropriate	Device possibly generated an arc	Utilize samples if maximum efficiency is not		
Arc discharge	well volume, occasional arcing	discharge. Program could be	essential. If you want to retry failed wells with		
correction 2		resumed and successfully completed.	new samples, check whether combination of		
		A limited impairment on efficiency and vitality has to be presumed.	96-well program and Solution fits the protocol recommendations and check sample volume.		
Err7 -	Supply voltage insufficient or	No pulse generated	If you want to retry the failed wells, generate		
Supply voltage	Nucleofector II defective		a new Parameter file containing parameters		
too low			for the previously failed wells only. If the experiment was interrupted due to continuous Err7, check supply voltage and re-start program execution.		
Err8 -	Inappropriate solution or volume,	Device possibly generated an arc	If you want to retry failed wells with new		
Arc discharge	occasional arcing	discharge leading to incomplete	samples, check whether combination		
		program execution. A substantial	of 96-well program and Solution fits the		
		impairment on efficiency and	protocol recommendations and check		
		viability has to be presumed.	sample volume.		

Error Code	Possible error	What happened?	What to do?
(logged in Result file)			
Err9 - Inappropriate solution, volume	Inappropriate solution or volume or Nucleofector II possibly defective	Device possibly generated an over-current. A substantial impairment on efficiency and viability has to be presumed.	If you want to retry failed wells with new samples, check whether combination of 96-well program and Solution fits the protocol recommendations and check sample volume.
Err10 - Inappropriate solution, volume	Inappropriate solution or volume or Nucleofector II possibly defective	Device possibly generated an over-current. A substantial impairment on efficiency and viability has to be presumed.	If you want to retry failed wells with new samples, check whether combination of 96-well program and Solution fits the protocol recommendations and check sample volume.
Err11 - DSP error	Internal Nucleofector II error or device possibly defective	Pulse possibly omitted.	If you want to retry failed wells with new samples, switch off the Nucleofector, wait for 2 seconds, switch on again and re-start program execution with new samples.
WEAK - Inappropriate solution	Inappropriate solution or combination with program, well volume too low	A weak pulse occurred. Only sub-optimal efficiency might be achieved.	Utilize samples if maximum efficiency is not essential. If you want to retry failed wells with new samples, check whether combination of 96-well program and Solution fits the protocol recommendations and check sample volume.

Appendix

5.1

Color code of boxes (drop-downs, text boxes)

	background	text	Values
Inactive box (no well selected)	Pale blue	No text	No values
Active box - one well selected	White	Black text	Shown
Active box - several wells seleceted with same parameters	White	Black text	shown
Active box - several wells selected with different parameters for some boxes*	Boxes with same parameters: white	Boxes with same parameters: black	Boxes with same parameters: shown
	Boxes with different parameters: light grey	Boxes with different parameters: red	Boxes with different parameters: "values differ"

* it should be possible to change text in these boxes, after pressing APPLY it values should be true for all wells selected and box should get white with black text

5.2

Color codes of wells

	Parameter file	Result file	
		ОК	Error
undefined			
defined		+	•
No program control			
No DNA control		×	1

List of Shortcuts

<ctrl> + C</ctrl>	Сору
<ctrl> + V</ctrl>	Paste
<ctrl> + S</ctrl>	Save
<ctrl> + Z</ctrl>	Undo
<ctrl> + Y</ctrl>	Redo
<ctrl> + D</ctrl>	Undefine
Shift + arrow keys	Selection of several wells

Copy-Paste functionality

1. Сору

1	A1	A2	Α3	Α4	A5	A6	Α7	A8	Α9	A10	A11	A12
	B1	B2	В3	Β4	B5	Β6	B7	В8	В9	B10	B11	B12
	C1	C2	C3	C4	C5	C6	C7	C8	C9	C10	C11	C12
	D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12
	E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
	G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
	H1	H2	H3	H4	H5	H6	H7	Н8	Н9	H10	H11	H12

2. Paste

a) to same number of selected wells:

Selection of wells in which copied parameters shall be pasted:

A1	A2	Α3	Α4	A5	A6	Α7	A8	Α9	A10	A11	A12
B1	B2	В3	Β4	B5	B6	B7	В8	В9	B10	B11	B12
C 1	C2	С3	C4	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12
E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	H5	H6	H7	Н8	Н9	H10	H11	H12

Result of pasting:

A1	A2	Α3	A1	A5	Α6	Α7	A8	Α9	A10	A11	A12
B1	B2	B3	B1	B5	В6	Β7	В8	В9	B10	B11	B12
C1	C2	С3	C1	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2	D3	D1	D5	D6	D7	D8	D9	D10	D11	D12
E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	Н4	H5	H6	H7	Н8	Н9	H10	H11	H12

5.4

b) to a smaller number of selected wells:

Selection of wells in which copied parameters shall be pasted:

.

A1	A2	Α3	Α4	A5	A6	Α7	A8	Α9	A10	A11	A12
B1	B2	B3	Β4	B5	B6	B7	Β8	В9	B10	B11	B12
C1	C2	С3	C4	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12
E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	Н5	H6	H7	Н8	Н9	H10	H11	H12

Result of pasting:

A1	A2	Α3	A1	A5	A6	Α7	A8	Α9	A10	A11	A12
B1	B2	В3	B1	B5	Β6	Β7	В8	В9	B10	B11	B12
C1	C2	C3	C1	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12
E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	H5	H6	H7	Н8	Н9	H10	H11	H12

c) to a higher number of selected wells:

Selection of wells in which copied parameters shall be pasted:

Result of pasting:

A1	A2	А3	Α4	Α5	A6	Α7	A8	Α9	A10	A11	A12
B1	B2	В3	Β4	В5	B6	B7	B8	В9	B10	B11	B12
C1	C2	С3	C4	C5	C6	C7	C8	C9	C10	C11	C12
D1	D2	D3	D4	D5	D6	D7	D8	D9	D10	D11	D12
E1	E2	E3	E4	E5	E6	E7	E8	E9	E10	E11	E12
F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12
G1	G2	G3	G4	G5	G6	G7	G8	G9	G10	G11	G12
H1	H2	H3	H4	Н5	H6	H7	Н8	Н9	H10	H11	H12

A1 A2 A3 A1 A1 A6 A7 A8 A9 A10 A11 A12 B1 B2 B3 B1 B1 B6 B7 B8 B9 B10 B11 B12 C1 C2 C3 **C1 C1 C6 C7 C8 C9 C10 C11 C12** D1 D2 D3 D1 D1 D6 D7 D8 D9 D10 D11 D12 E1 E2 E3 A1 A1 E6 E7 E8 E9 E10 E11 E12 F1 F2 F3 B1 B1 F6 F7 F8 F9 F10 F11 F12 G1 G2 G3 G4 G5 G6 G7 G8 G9 G10 G11 G12 H1 H2 H3 H4 H5 H6 H7 H8 H9 H10 H11 H12

Manufacturer and distributor information:

The Nucleofector[®] 96-well Shuttle[®] Software is manufactured by amaxa biosystems (amaxa AG, Nattermannallee 1, 50829 Cologne, Germany) and distributed in the US by amaxa Inc. (205 Perry Parkway, Suite 7, Gaithersburg, MD 20877, USA).

Copyright amaxa 2006.

The Nucleofector[®] Technology, comprising nucleofection[®] Process, Nucleofector[®] Device, Nucleofector[®] Solutions, Nucleofector[®] 96-well Shuttle[®] System and 96-well Nucleocuvette[™] plates and modules are covered by patent and/or patent pending rights owned by amaxa.

amaxa, Nucleofection, Nucleofector, gene transfer begins here, 96-well Shuttle and Nucleocuvette are trademarks of amaxa AG.

Microsoft, Windows and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Dell is a trademark of Dell Inc.

Unauthorized use of registered names, trademarks, patents and patent applications, copyrights or other intellectual property or rights may be a violation of applicable laws.

All rights reserved.

amaxa AG Nattermannallee 1 50829 Koeln Germany

www.amaxa.com



5-well Shuttle"

Europe/World

Scientific Support

e-mail scientific-support@amaxa.com phone +49 (0)221-99199-400 fax +49 (0)221-99199-499 **Order** e-mail order@amaxa.com phone +49 (0)221-99199-500

ax +49 (0)221-99199-599

USA

Scientific Support